



SKAT
Basic cleaner



Product name: SKAT
Product range: floorHYGIENE

Product description:

Basic cleaner for all kinds of water-resistant floors. Do not use on wooden floors. Removes easily old maintenance coatings.

Packaging units:

6 x 1 kg system bottle Art.-No. 4430100108
10 kg canister Art.-No. 4430100111


Ph-value:

alkaline



Field of application | use:

Also suitable as intensive cleaner for uncoated surfaces. Pleasant in use, as no unpleasant odours arise. Especially suitable for alkali sensitive floors like linoleum or vulcanized rubber. In case of sensitive floors - especially linoleum - test the product at a dilution rate and effect time as on the label indicated in a non-visible spot. Do not use in case of colour changes!

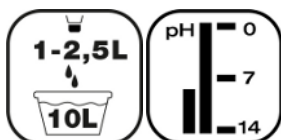

Dosage:

Mix 1 to 2.5 litres of SKAT with cold water up to 10 litres. Apply on the floor and let the product take effect for 5 to 20 minutes. Don't let it dry in. Strip off the old maintenance coat with a single disc machine or scrubber. Then vacuum clean and wash with clear water at least 2 times.

Safety information:

When handling chemicals apply standard safety measures. Read product characteristics before use. Keep away from children.

Storage:

Keep container closed. Store at room temperature to retain product quality.

Product recommendation:

For basic cleaning of non-sensitive waterproof floors (e.g. pvc) we recommend ZACK - basic cleanser (Art.-No. 4430100211). To guarantee a long lifetime of the waterproof floors, we recommend the adjacent coating with HAGLEITNER coatings.



floorHYGIENE

SKAT

Basic cleaner

Euro pallet:
60 canisters

Selling unit:
Canister